

REAR DOOR BUG SCREEN


MERCEDES-BENZ SPRINTER AND FORD TRANSIT




CAUTION

If you're not comfortable installing this product yourself, we recommend contacting a local van builder for assistance.


What's Included:

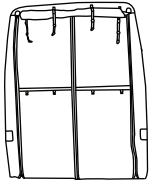

Rear Door Bug Screen

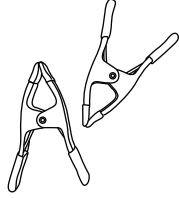


2x Spring Clamps

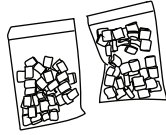

50x Small and
50x Large Metal Clips

You Will Need:



A Sharp Blade




A Step Ladder




A Friend

Estimated Install Time: 60-90 Minutes


1. Open your rear van doors and have a friend help you hold the screen up with the buckles and logo facing out towards you. Use included clamps to hold the screen in place in the top corners.

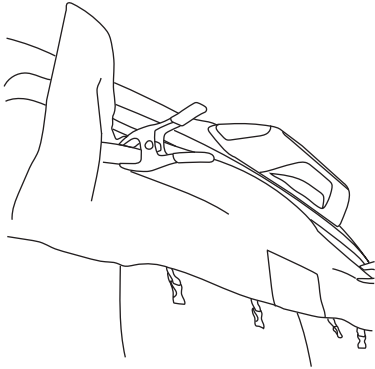


2. Starting at the top and in the middle, slowly pull the weather strip away from the door frame in a **small 12" section**. If there's grease underneath the weather strip, be sure to clean it off before proceeding. **NOTE: Each rear door style is slightly different based on brand. Align the center zipper to the rear view camera for the best fit.**

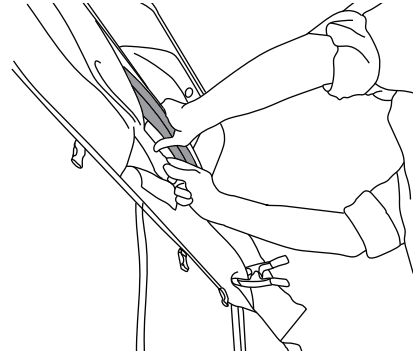

3. Feed the bug screen fabric underneath the weather strip until the bug screen is hanging at the desired height at or above the bottom step of the van. Make sure it's not hanging too low and isn't blocking the door latches.

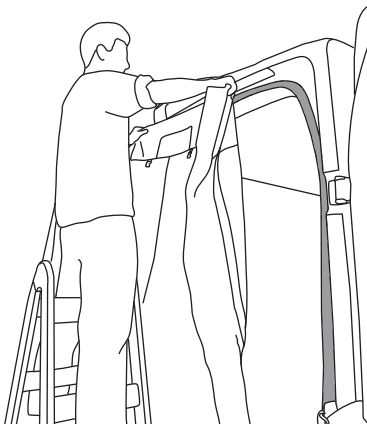

4. Secure the bug screen to the door by inserting the metal clips onto the frame. There are two sizes of clips to accommodate for different widths around the door frame. Use the size that fits the door frame best and creates the most tension. Wrap your hand around the weather strip and squeeze to close it up before reinstalling over the fabric and clip.

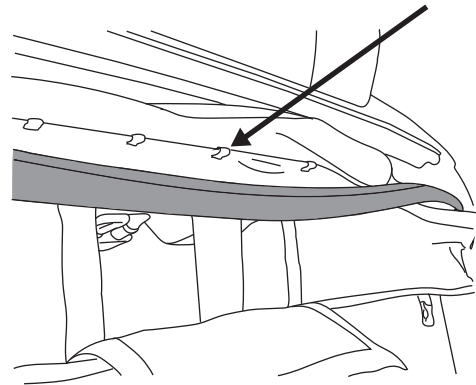


REAR DOOR BUG SCREEN


- 5.** Working from the top to the sides and in **small 12" sections**, continue pulling the weather strip away, tucking the bug screen fabric underneath and inserting metal clips along the way. Use as many metal clips as possible for a secure fit. **NOTE: Leave a lot of slack as you're installing the bug screen (avoid the bug screen being taught) to prevent too much tension on the weather strip. The more slack you have, the better the zipper closure will function.**



- 6.** Once your bug screen is installed, check that everything is operational. Roll up and secure your bug screen with the buckles and check that the door opens and closes. Make fit adjustments if needed.

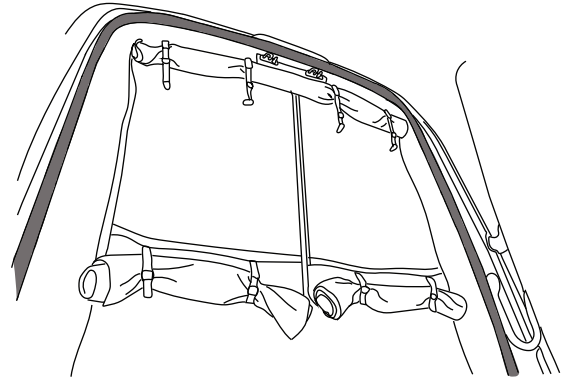

- 7.** Lastly, remove excess fabric with a sharp blade for a professional DIY fit.

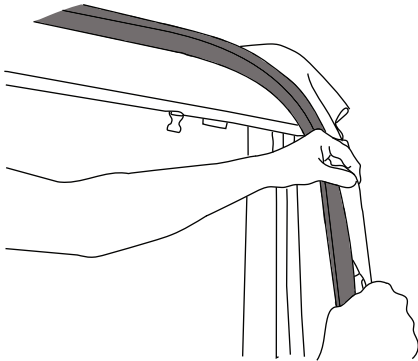

- 8.** Enjoy a pest-free van life!

