


VANESSENTIAL

VENTURE L-TRACK ONTO WOOD




If you're not comfortable installing this product yourself, we recommend contacting a local van builder for assistance with the install.

What's Included:

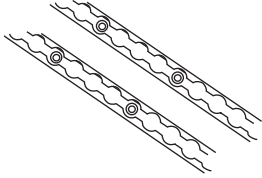

Venture L-Track


You Will Need:

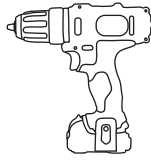

Drill




1/4 in Drill Bit

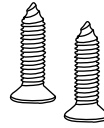


#12 Screws

1. Determine where you would like to install your L-Track. If needed, cut your track to size with an angle grinder or hacksaw and clean up the edges with a metal file.

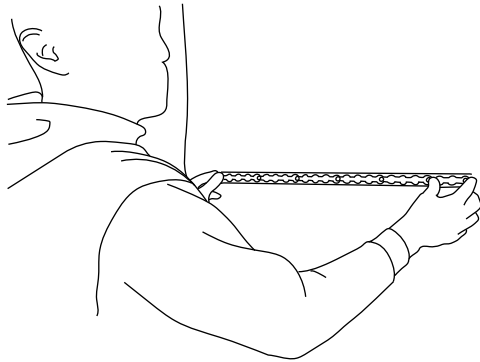

2. Pre-drill your hole with a 1/4 drill bit, then secure the L-track with #12 wood screws.

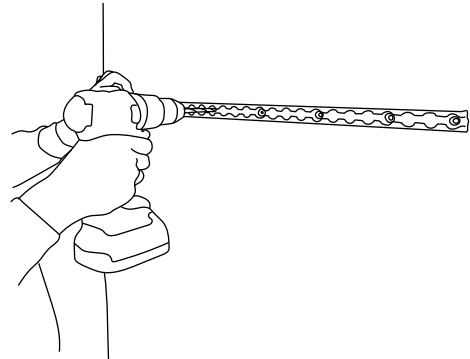

3. Optional: Add end caps for a finished look and secure with a #6 screw.

