

VANESSENTIAL


VENTURE L-TRACK ONTO SHEET METAL OR WOOD



If you're not comfortable installing this product yourself, we recommend contacting a local van builder for assistance with the install.

To mount onto sheet metal:

What's Included:

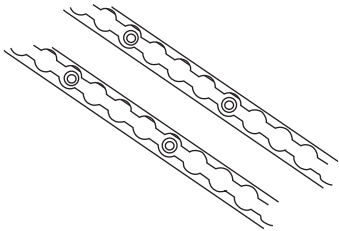

Venture L-Track


You Will Need:




Drill




1/4 in and 5/16 in
Drill Bits

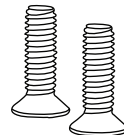

M6 Screws

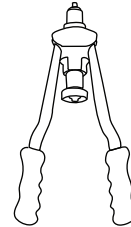

Rivnut Tool




M6 Rivnuts





Center Punch

1. Determine where you would like to install your L-Track. If needed, cut your track to size with an angle grinder or hacksaw and clean up the edges with a metal file.
2. When you have your track in the desired position, use a center punch to mark the center of a hole in the middle of the track. Then, use the hole as a guide to drill a hole with your 1/4 drill bit.

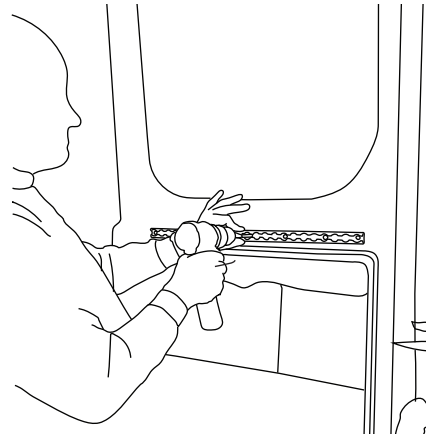


3. Remove the track, and drill into the hole you just made with a 5/16 bit. Refer to instructions from your rivnuts for size.
4. Using your rivnut tool, insert a M6 rivnut into the hole you just drilled.

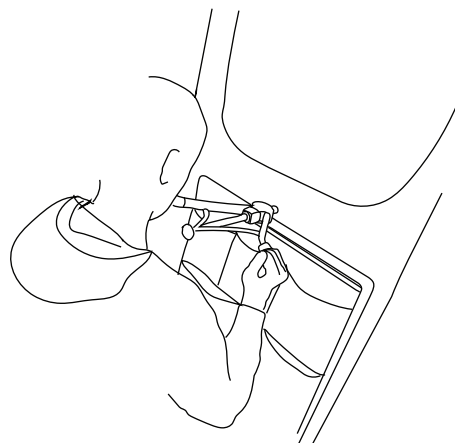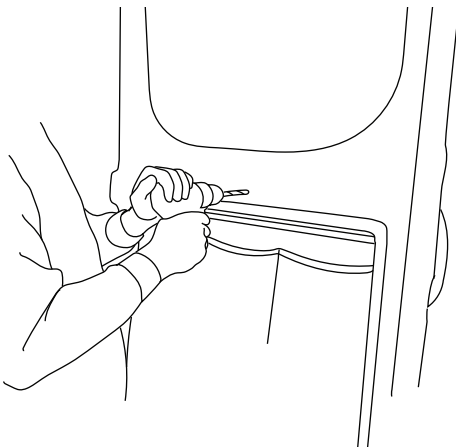


VENTURE L-TRACK


5. With a M6 screw, secure your track into place at one point using the hole you just created.

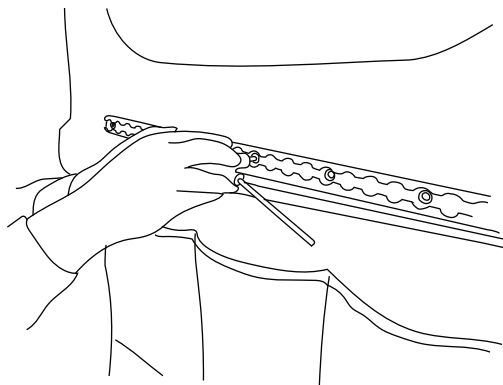


6. Repeat steps 2-5 with another hole along your track. Ensure your track is aligned where you want it as you drill.

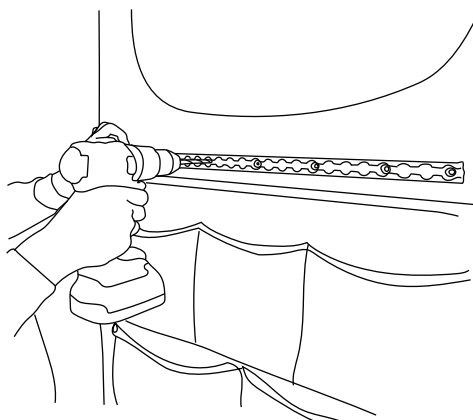

7. Once you have two screws in place and your track is where you would like it, repeat steps 2-5 on the rest of the holes, using the holes as a guide.

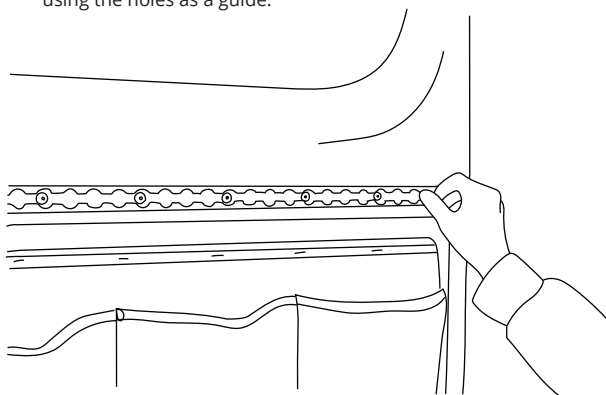


8. Optional: Add end caps into place for a finished look and finish with a #6 screw.

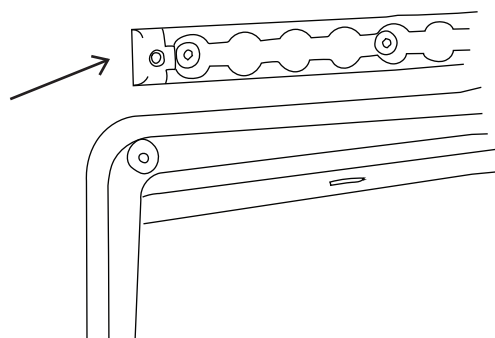


To mount onto wood:

What's Included:

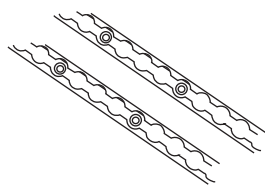

Venture L-Track


You Will Need:

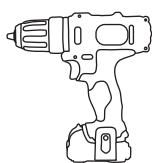

Drill




1/4 in Drill Bit



#12 Screws

1. Determine where you would like to install your L-Track. If needed, cut your track to size with an angle grinder or hacksaw and clean up the edges with a metal file.

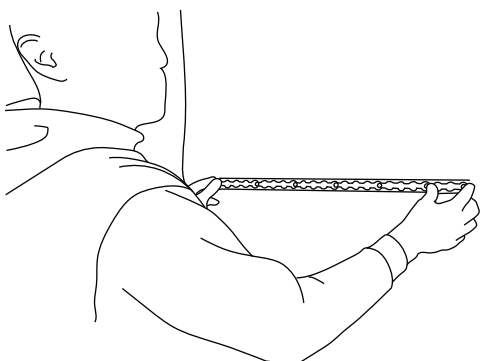

2. Pre-drill your hole with a 1/4 drill bit, then secure the L-track with #12 wood screws. Optional: Add end caps for a finished look and secure with a #6 screw.

