



VANESSENTIAL

48" UPPER STORAGE CABINET


What's Included:

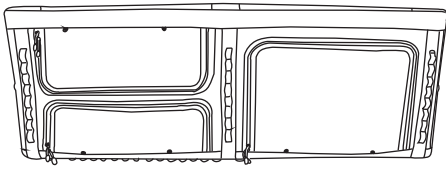


48" Upper Storage Cabinet




6x Bolts




6x Lock Washers



6x Rubber Washers




6x Metal Washers

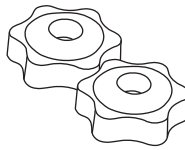


6x Plastic Knobs

You Will Need:

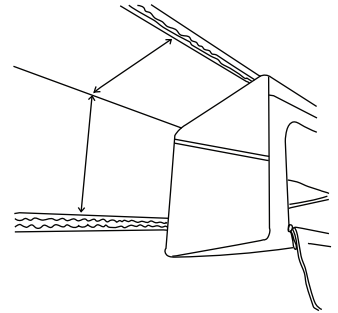


L-Track installed on your wall and ceiling, 12.5 inches from the corner


1. Remove all loose items from inside the cabinet and set them aside.

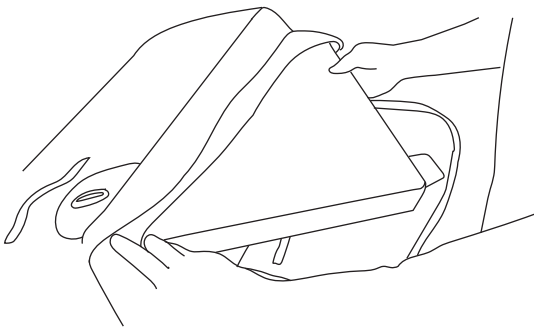


2. Orient the cabinet to face you and locate the left-hand wall piece which is marked with an "L" tag.

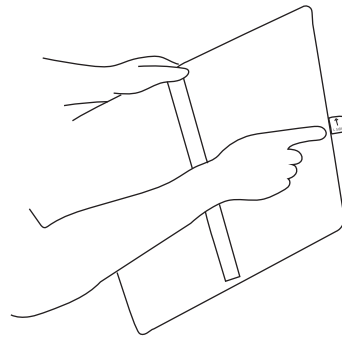

3. Insert the left-hand wall piece into the cabinet by attaching it vertically to the velcro strip. Next, locate the right-hand wall piece labeled with the "R" tag and repeat this step on the right-hand side of the cabinet. Locate the remaining wall piece and insert it vertically into the middle of the cabinet.

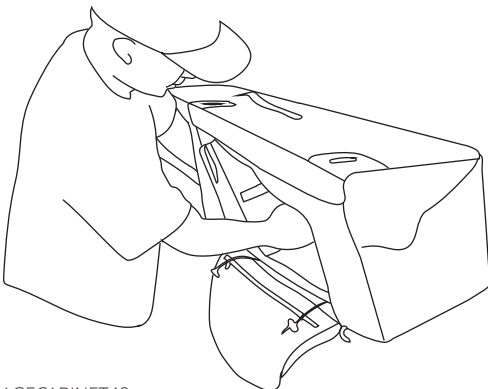


4. On the left side of the cabinet, insert the shelf piece horizontally by aligning it with the velcro strip inside the bag.

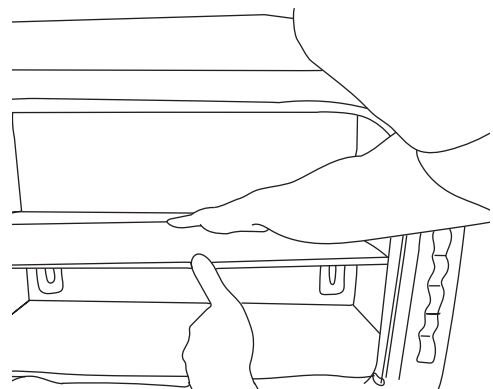


48" STORAGE CABINET INSTRUCTIONS


- 5.** Locate your I-track bolts, metal lock washers and rubber washers. Starting from right to left, place the first bolt in the desired location on your I-track 2 inches from the end of where you want the cabinet to be. Slide on the metal lock washer to the bolt and then slide the rubber washer on top.

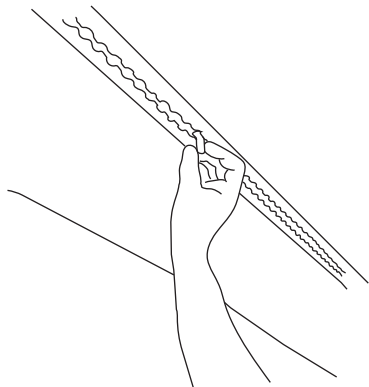


- 6.** Using a measuring tape, space out your next bolts to align with the eyelets on the back of the cabinet. Make sure to slide on the metal lock washer and rubber washer on each bolt.

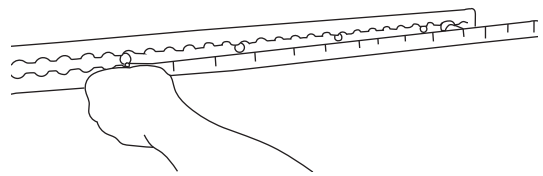


- 7.** Install your 3 remaining bolts below onto the wall of the van.

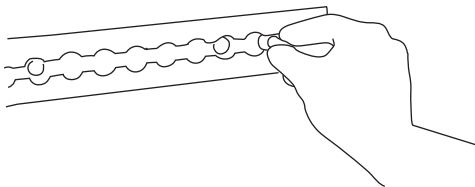

- 8.** Now that your bolts are in place on the I-track, locate your metal washers and your plastic lock-knobs and have them close by. Lift the cabinet into place aligning the bolts to the eyelets on the back of the cabinet. It's best to start securing your cabinet to the I-track from the center, working your way to the outside, and then below to the van wall. Locate your metal washer and place over the top center bolt and then secure it with a plastic lock-knob. Repeat for all bolts.

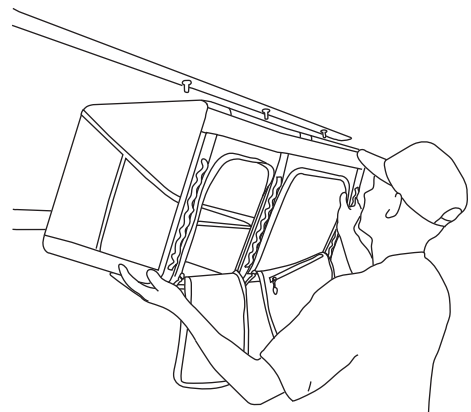

- 9.** If your cabinet is not horizontal to your floor, loosen your plastic lock-knobs, reposition the cabinet and tighten knobs once it's in place.

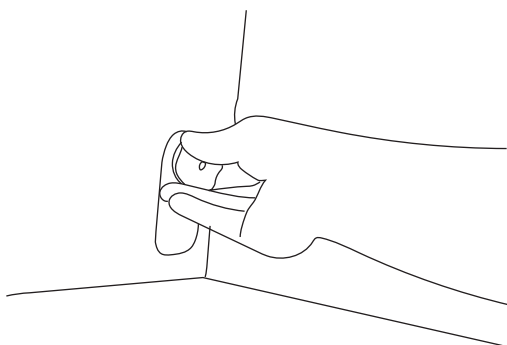

- 10.** That's it! You're ready to use your cabinet for all of your van storage needs.

